Viq[™] Technical Specification

Robe Hook

DN6403


Stock Numbers:

- DN6403CH Robe Hook Chrome Finish
- DN6403BN Robe Hook Brushed Nickel Finish

Materials:

Robe Hook is constructed of stainless steel 304.

Dimensions:

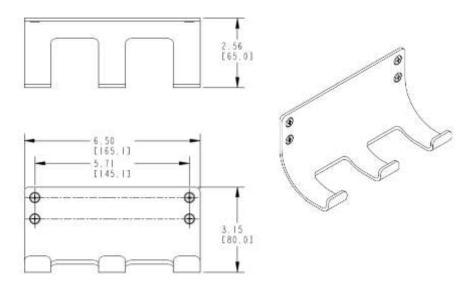

Installation Instructions:

For dryw all Installation:

- 1. Position mounting template on the wall in the desired location.
- 2. Using a level, align template and tape it to the wall.
- 3. Drill 5/16" pilot hole at marked locations.
- 4. Remove the template from the wall.
- 5. Fold ends of the plastic toggle anchor together and insert into each hole in the wall.
- 6. Lightly tap anchors until flush with wall.
- 7. One at a time, insert plastic pin into each anchor and lightly tap to activate anchor. Remove pin and repeat on other anchor.
- 8. Position product on the wall over each mounting location.
- 9. Insert screw in mounting location.
- 10. Tighten screw.
- 11. Repeat until all mounting locations are secured.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:	Robe Hook
By Creative Specialties	



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM

©Copyright Creative Specialties International