
Felicity® Technical Specification Robe Hook YB9703

Stock Numbers:

- □ YB9703BN Robe Hook Brushed Nickel Finish
- □ YB9703CH Robe Hook Chrome Finish
- YB9703ORB Robe Hook
 Oil Rubbed Bronze Finish

Dimensions:

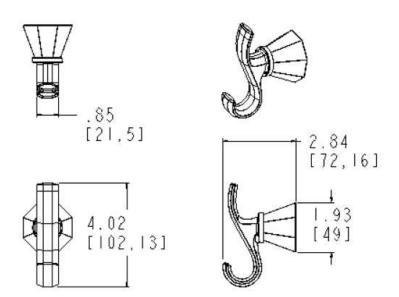

Materials:

Robe Hook is constructed of zinc.

Installation Instructions:

- 1. Remove the mounting bracket from the body by loosening the setscrew.
- 2. Position the assembled unit on the wall where desired.
- 3. Lightly mark the outline of each base.
- 4. Center a mounting bracket within each base outline with "UP" facing you.
- 5. Mark the two large hole locations of each mounting bracket.
- 6. Attach each mounting brackets to the wall, using the wall anchors provided.
- 7. Mount each base on the corresponding mounting bracket. Check and make sure that the base set screw hole(s) are facing down. Assemble a set screw to each base. Using the allen wrench included in hardware kit to tighten each set screw and secure the assembly to the mounting bracket(s).

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:	Robe Hook
By Creative Specialties	

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM

©Copyright Creative Specialties International

Literature #BA1295

