

MOEN® 摩恩

Specifications

产品主要特点 Main Features of The Product:

一键清洗、立体按摩、可拆自动除臭、座圈缓降、LED夜灯、遥控冲水、座圈感应、停电冲水、空气隔离、防止逆流、安全保护等。

One-touch Control, 3D Massage, Replaceable Nozzle, Automatic Deodorization, Soft-close Seat, Night Light, Remote Control Flushing, Sitting Sesor, Emergency Flushing, Air Isolation, Anti Counterflow, Safety Protection etc.

产品规格 Product Specifications: 690mm*387mm*479mm

洗净方式 Flushing Method: 超旋式冲洗 Super-spin flushing

坑距 Rough-in: HKSW1365C 305mm; HKSW1364C 305mm;

HKSW1363C 305mm; HKSW1362C 305mm;

HKSW1361C 305mm;

供水水压范围 Inlet Water Pressure Range: 0.08MPa-0.75MPa

输入 Input: 220V~50Hz

额定功率 Rated Power: 1200W

电击防护类别 Electric Shock Protection Category: TYPE I

防水等级 Waterproof Level: IPX4

安全装置 Safety Devices:

蝶形温控器、热保护器、流量检测装置、双金属片温控器、温度保险丝

Butterfly-shaped thermostat, thermal protector, flow detection device, Bimetal thermostat, thermal cutoff.


执行标准 Execute Standard:

GB/T 34549-2017

GB 38448-2019

完工墙面

Completion of metope

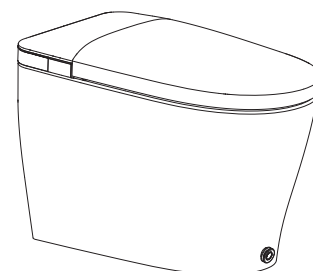

北极星系列Polaris Series

智能坐便器Intelligent Toilet

型号 Models:

HKSW1365C(坑距 Rough-in: 305mm)

HKSW1364C(坑距 Rough-in: 305mm)

HKSW1363C(坑距 Rough-in: 305mm)

HKSW1362C(坑距 Rough-in: 305mm)


HKSW1361C(坑距 Rough-in: 305mm)

注意: 本公司保留随时变更图中标示尺寸的权利, 无需另行通知。


Note: The company reserves the right to change the dimensions on the drawing without prior notice.

单位: mm


Unit: mm

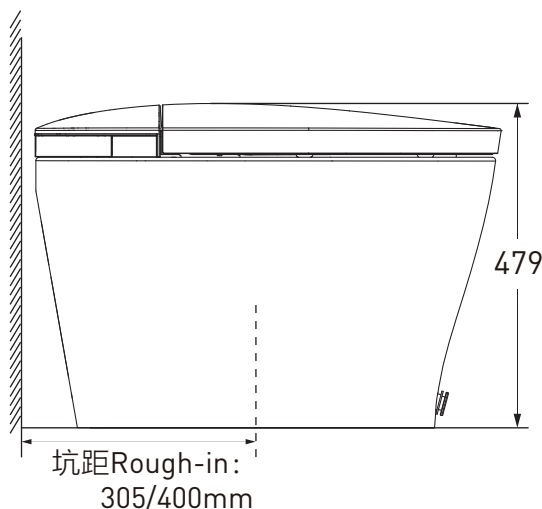

侧面图 Side View

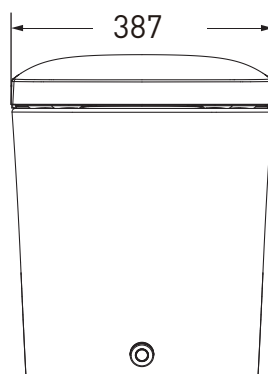

正视图 Front view

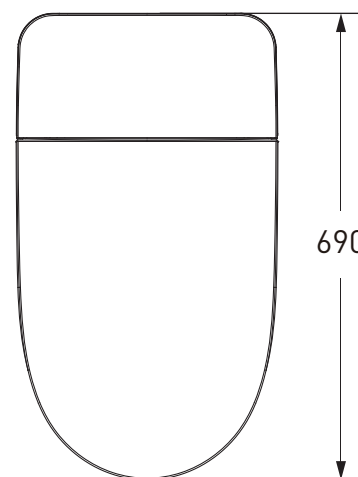

俯视图 Top View

CRITICAL DIMENSIONS DO NOT SCALE

功能表 Function Table

功能分类 Functional Classification	型号 Model 功能 Function	HKSW1365C 亮黑色 Bright Black	HKSW1364C 亚光黑 Matte Black	HKSW1363C 不锈钢拉丝 Brushed Stainless Steel	HKSW1362C 亚光黑 Matte Black	HKSW1361C 不锈钢拉丝 Brushed Stainless Steel
清洗类 Cleaning	臀洗 Rear Wash	●	●	●	●	●
	妇洗 Front Wash	●	●	●	●	●
	一键清洗 One-touch Control	●	●	●	●	●
	往复清洗 Moving Wash	●	●	●	●	●
	立体按摩 3D Massage	●	●	●	●	●
	水压按摩 Water-pressure Massage	●	●	●	●	●
	冷热按摩 Hot and Cold Massage	●	●	●	●	●
	水压调节 Water-pressure Adjustment	●	●	●	●	●
	水温调节 Water Temperature Adjustment	●	●	●	●	●
	可拆卸喷头 Replaceable Nozzle	●	●	●	●	●
	喷嘴自洁 Nozzle Self Cleaning	●	●	●	●	●
	喷嘴保养 Nozzle Maintenance	●	●	●	●	●
	喷嘴位置调节 Nozzle Position Adjustment	●	●	●	●	●
舒适类 Comfort	座圈加热 Seat Heating	●	●	●	●	●
	自动除臭 Automatic Deodorization	●	●	●	●	●
	座盖缓降 Soft-close Cover	●	●	●	●	●
	座圈缓降 Soft-close Seat	●	●	●	●	●
	LED夜灯 Night Light	●	●	●	●	●
	即热恒温 Instant Heating	●	●	●	●	●
	暖风烘干 Wind Drying	●	●	●	●	●
	快速烘干 Flash Drying	●	●	●	●	●
	预润净瓷 Pre-flushing	●	●	●	●	●
	风温调节 Wind Drying Adjustment	●	●	●	●	●
	风速调节 Wind Speed Adjustment	●	●	●	●	●
	座温调节 Seat Temperature Adjustment	●	●	●	●	●
节能便捷类 Energy Saving and Convenience	遥控冲水 Remote Control Flushing	●	●	●	●	●
	停电冲水 Emergency Flushing	●	●	●	●	●
	离座冲水 Automatic Flushing	●	●	●	●	●
	烘干冲水 Wind Drying with Flushing	●	●	●	●	●
	座圈感应 Sitting Sensor	●	●	●	●	●
	自动断电 Automatic Power Off	●	●	●	●	●
	来电自启 Auto-start	●	●	●	●	●
	低压冲洗 Low Pressure Flushing	●	●	●	●	●
	脚触翻盖 Foot-touch flipping for Cover	●	●	●	—	—
	脚触翻圈 Foot-touch flipping for Seat	●	●	●	—	—
	脚触冲水 Foot-touch Flushing	●	●	●	—	—
	前置过滤 Pre-filter	●	●	●	●	●
安全环保类 Safety and Environmental Protection	空气隔离 Air Isolation	●	●	●	●	●
	喷枪紫外线杀菌 Nozzle UV Sterilization	●	●	●	●	●
	紫外线杀菌水 Water UV Sterilization	●	●	●	●	●
	防止逆流 Anti Counterflow	●	●	●	●	●
	易洁釉面 Easy Clean Glaze	●	●	●	●	●
	抗菌喷枪 Antibacterial Nozzle	●	●	●	●	●
	抗菌座圈 Antibacterial Seat	●	●	●	●	●
	安全保护 Safety Protection	●	●	●	●	●

备注: ● 代表产品有此功能, — 代表产品无此功能。 Note: ● Indicates that the product has this function. — This function is not available for the product.

CRITICAL DIMENSIONS DO NOT SCALE

冲水Flushing


便后冲水

Flushing after urination

唤醒按键 Wake-up Button

遥控器按键背光点亮

Remote controller button backlight lit up

**停止Stop**

停止臀洗Stop rear wash

停止妇洗Stop front wash

停止烘干Stop wind drying



stop

档位指示灯Gear Indicator Light四级灯带长度提示档位信息
Four levels of light strip
length to indicate the gear
information**喷嘴位置Nozzle Position**可进行前后4档喷嘴位置调节
The nozzle position can be
adjusted forward or backward
between 4 gearsnozzle
position**座温Seat Temperature**

调节座温

Adjust seat temperature

seat
temp.**水压Water Pressure**

调节水压

Adjust water pressure

water
temp.water
pressure

dryer

烘干Wind Drying

通过暖风使被清洗部位干燥

Drying the washed part by
wind**臀洗Rear Wash**

清洗臀部

Wash buttocks

水温Water Temperature

调节水温

Adjust water temperature

妇洗Front Wash

清洗私处

Wash the vagina



rear




front

电量指示灯**Battery Capacity Indicator Light**

提示电量状态

For battery capacity indication

**USB充电口USB Charging Port**

电量指示灯闪烁时, 请立即充电

Please charge immediately

when the battery capacity

indicator light flashes

冷热按摩Hot and Cold Massage

水温的冷热交替清洗

Alternating hot and cold water
temperature wash**夜灯Night Light**

LED夜灯开启或关闭

Turn on/off the night light

**立体按摩3D Massage**

全方位的3D按摩效果

All-round 3D massage effect

水压按摩Water Pressure Massage

水压的强弱交替清洗


Alternating wash with strong and
weak water pressure**喷嘴清洗Nozzle Clean**

清洁喷嘴Clean the nozzle

3D
massageH/C
massagepressure
massage

lighting

nozzle
clean**CRITICAL DIMENSIONS** DO NOT SCALE

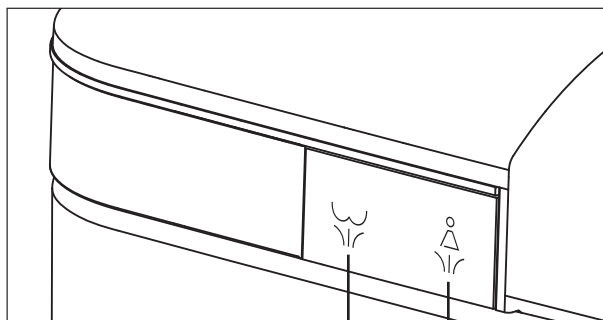

智能臀洗(一键清洗)Smart Rear Wash(One-touch Control)

开机时，着座且无清洗、烘干状态下。

短按“”按键发送智能臀洗命令。

进入智能臀洗状态，清洗默认为往复清洗开启状态，整个功能运行周期为：臀洗1.5分钟+暖风烘干4分钟+暖风烘干时冲水一次。

智能臀洗处于清洗状态时，再次短按“”按键，快进至暖风烘干并伴随一次冲水。

Powered on, not seated, with wash and wind drying functions disabled.

Short press the "" button to send the smart rear wash command.

Smart rear wash is activated, and the moving wash mode is enabled by default. The entire functional operating cycle is: rear wash for 1.5 minutes + wind drying for 4 minutes + flush once during wind drying.

When the smart rear wash is running, press the "" button again to fast forward to the wind drying, accompanying with once flushing.

智能妇洗(一键清洗)Smart Front Wash(One-touch Control)

开机时，着座且无清洗、烘干状态下。

短按“”按键发送智能妇洗命令。

进入智能妇洗状态，清洗默认为往复清洗开启状态，整个功能运行周期为：妇洗1.5分钟+暖风烘干4分钟+暖风烘干时冲水一次。


智能妇洗处于清洗状态时，再次短按“”按键，快进至暖风烘干并伴随一次冲水。

Powered on, not seated, with wash and wind drying functions disabled.

Short press the "" button to send the smart front wash command.

Smart front wash is activated, and the moving wash mode is enabled by default. The entire functional operating cycle is: front wash for 1.5 minutes + wind drying for 4 minutes + flush once during wind drying.

When the smart front wash is running, press the "" button again to fast forward to the wind drying, accompanying with once flushing.

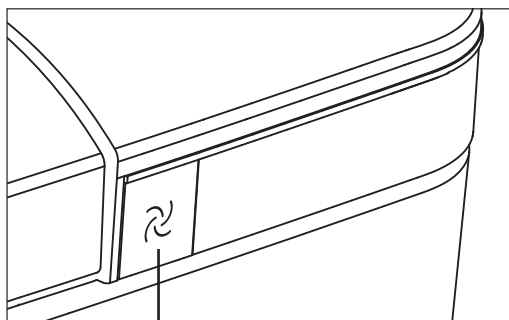

冲水/停止 Flush/Stop

按下“”按键。实现冲水或停止功能。

- 待机时，短按“”按键实现开机。
- 开机时，长按“”按键3秒实现待机。
- 开机且着座时，臀洗、妇洗、烘干功能运行时，短按停止。
- 开机且着座时，臀洗、妇洗、烘干功能未运行时，短按冲水。
- 开机且未着座时，喷枪紫外线杀菌或喷嘴清洗功能运行时，短按停止。
- 离座时，短按冲水。

Press the "" button to flush or stop the function.

- When in standby mode, short press the "" button to power on the product.
- When the power is on, press and hold the "" button for 3 seconds to enter standby mode.
- Powered on and seated: When the rear wash, front wash, or wind drying is running, short press the button to stop.
- Powered on and seated: When the rear wash, front wash, or wind drying is not running, short press the button to flush.
- Powered on and not seated: When the nozzle UV sterilization, or nozzle wash function is running, short press the button to stop.
- When leaving the seat, short press to flush.

CRITICAL DIMENSIONS DO NOT SCALE